



Please note that you have the option of hanging this product on a wall or on the ceiling. The default position is for hanging the product on the wall. If you chose to hang the item from the ceiling, the position of the dial will have to be changed. Please follow the steps below;

- 1) Open the clock case and carefully remove the four tension springs that hold the dial plate in place.
- 2) Rotate the dial plate attached to the bracket, clockwise toward the bracket. If done correctly the hanger should now be aligned with the bracket, see diagram 2 upper image. Replace the four springs and then repeat the same procedures for the other side of the clock, only rotate this dial plate counterclockwise, see diagram 2 lower image.

Please make sure that you follow the arrow direction in the diagram.

- 3) Make sure all 8 tension springs are in place. Close the case and hang the clock.
- 4) If you want to change it back to wall position, reverse the above steps.