


## Roost & Serve Hanging Instructions 14493BB-1263



On the back side of the clock the hanging slot is offset to support the uneven weight so that the clock will hang level.



We recommend to use a screw to hang your clock with.

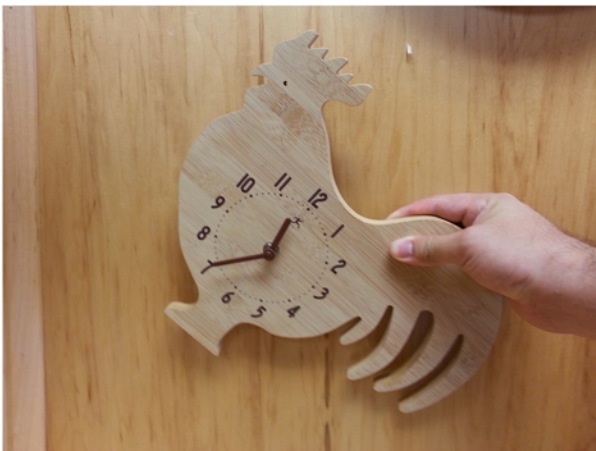

Place the clock on the screw (or nail if you choose) at an angle (shown in picture). This will help with lining up the hanging slot with the screw.



Rotate the clock to the left to level the clock.

Your Roost and Serve should hang level.



### **INFINITY INSTRUMENTS LTD**

430 Nelson Place, La Crosse, WI 54601  
888.346.9544 | 608.788.1049 fax

online catalog: [infinityinstruments.com](http://infinityinstruments.com)  
e-mail: [orders@infinityinstruments.com](mailto:orders@infinityinstruments.com)  
or [sales@infinityinstruments.com](mailto:sales@infinityinstruments.com)