

## 24" Definitive Radio Control Wall Clock

13376BK-2534

Please use the following instructions if the movement will not set to the correct time.

### Radio Control Override

Looking at the movement you will see a **TAB** directly above the battery on the left side. Next push the tab twice holding down on the second push. The minute hand should start to move. Hold down the tab until set to the correct time.

